


# Hiro WiFi Presenter - 2.4GHz WiFi Presenter with Laser pointer and wireless mouse function

\*\*\*Please make sure the transmitter is plug into the USB port, and the battery is input into the controller. Your computer should recognize the transmitter and install the driver automatically.

## Activate Laser Pointer:

1. As shown below, please hold the 2 buttons...

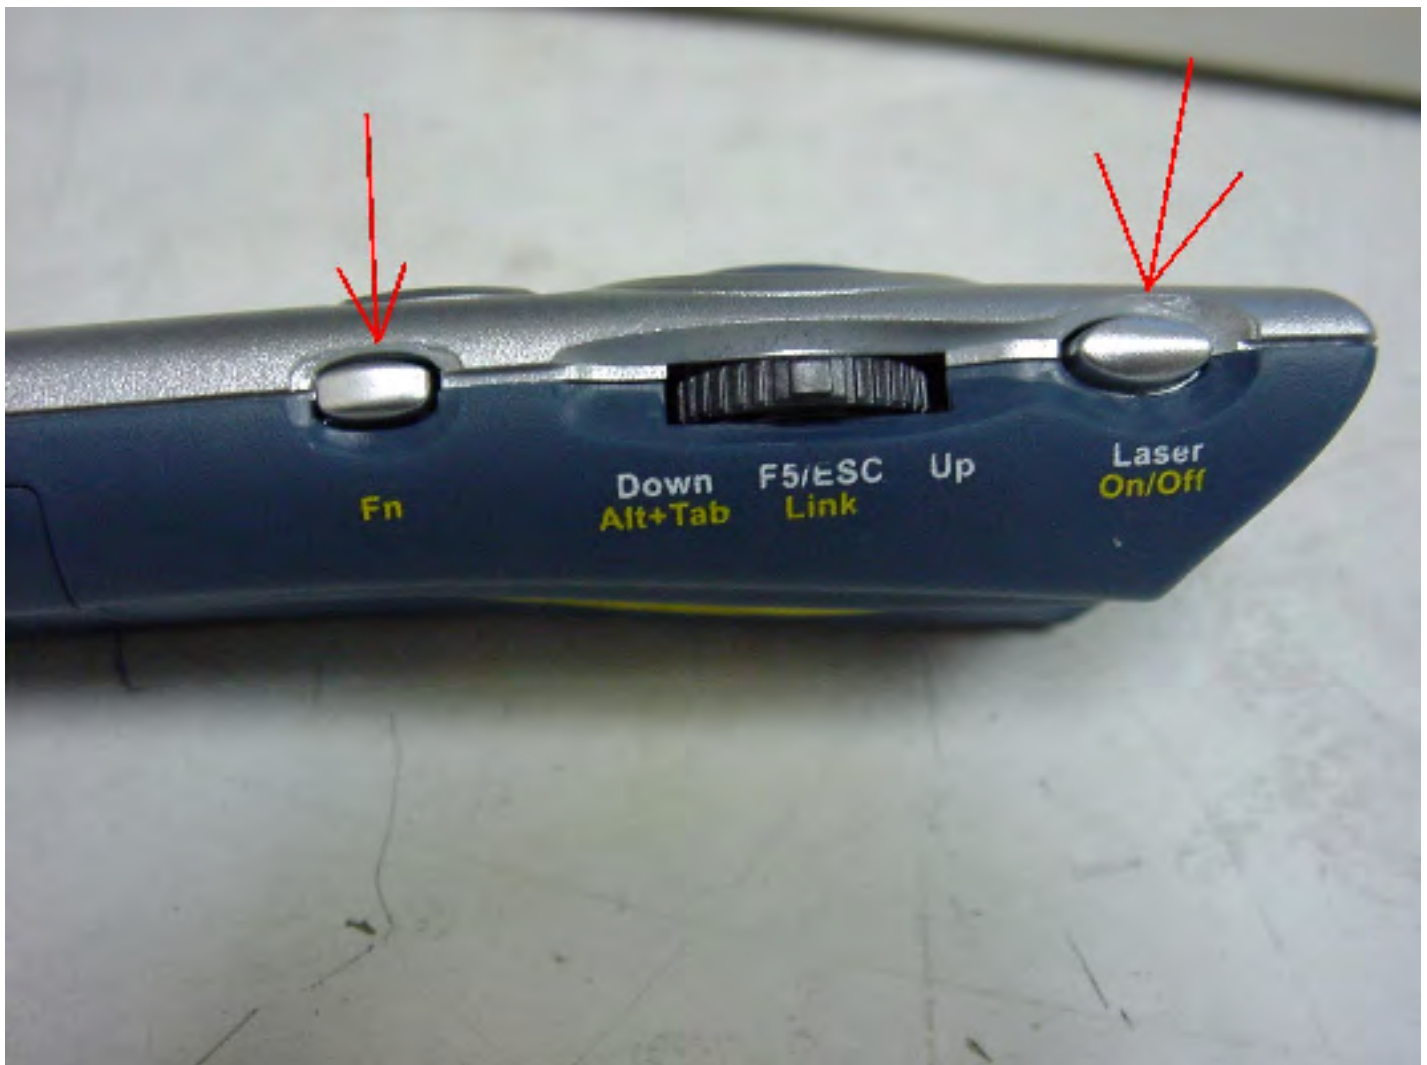

...till the LED is flashing in RED. Then release those buttons.



**2. Press and hold the button as shown below (blue arrow), and you can activate the laser pointer. The red dots should be the laser's direction.**



**3. To de-activate the laser pointer, repeat Step #1.**